



Uponor

RADIANT HEATING,
FIRE PROTECTION AND
PLUMBING SYSTEMS
SELECT UNCOILER

INSTRUCTION SHEET


Introduction

The Uponor Select Uncoiler (E6062000) facilitates the uncoiling of $\frac{5}{16}$ " to 1" Wirsbo hePEX™ plus, Wirsbo AQUAPEX®, Wirsbo AQUAPEX plus or Uponor multi-layer composite tubing (formerly MultiCor®).

The uncoiler features an adjustable reel to allow for either horizontal or vertical uncoiling. Refer to the following instructions to properly assemble the Select Uncoiler.


Step 1

Install the two tires onto the uncoiler base axles and secure in place with cotter pins.

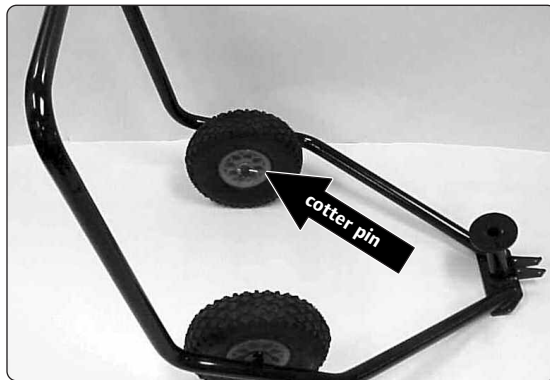

Step 2

Attach the reel support arm onto the uncoiler base at the spindle. Insert the small pin (attached to the chain) into the pivot hole.

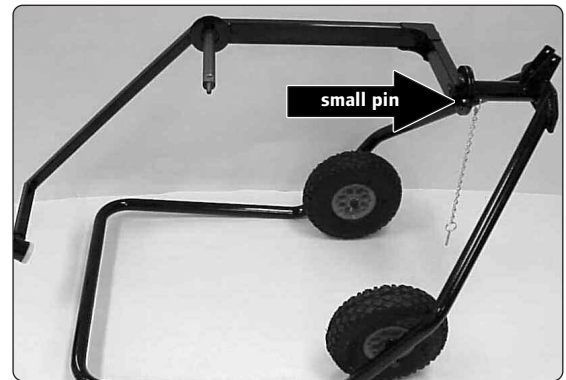


Step 3

Tighten the set screw to secure the silver collar onto the reel support arm shaft as shown in the photo.




Step 4

Attach the handle with a bolt and locking hex nut. Secure the handle with the other small pin (attached to the chain).

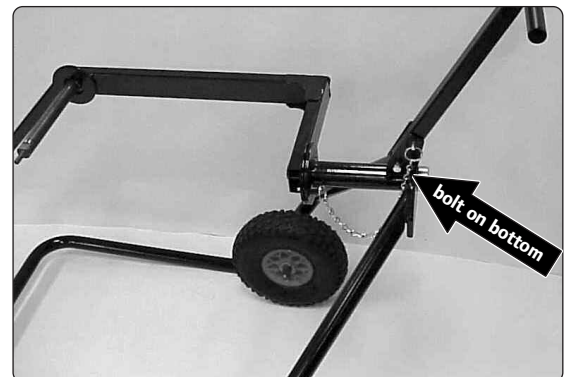


Step 5

Insert a nylon washer onto the reel axle.

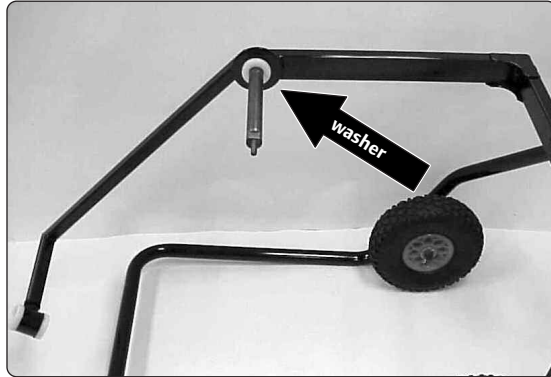


Step 6

Place the reel with the support hub onto the axle.

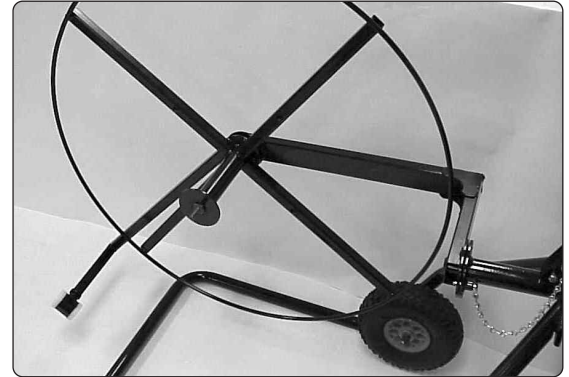


Step 7

Slide the brake pad, painted washer and plated flat washer onto the axle. Secure in place with the knurled handle.

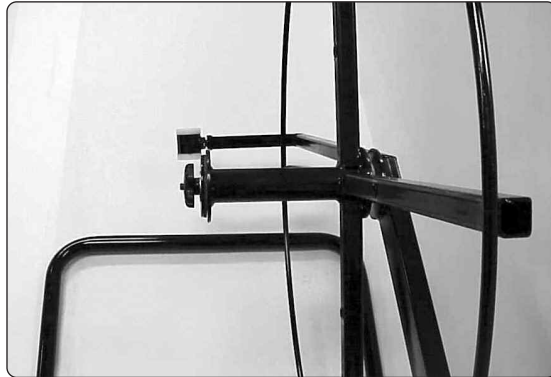


Step 8

Screw the four coil support rods onto the attached reel.

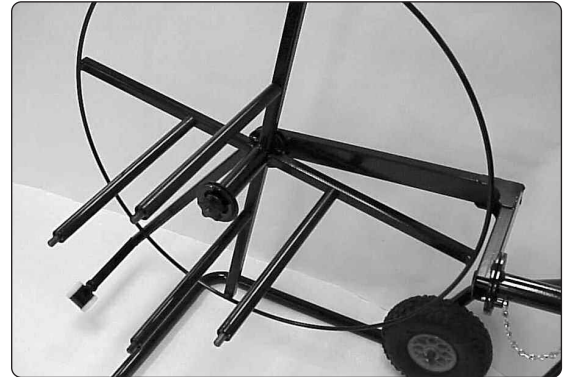

Step 9

Attach the second reel onto the coil support rods and secure with four wing nuts.

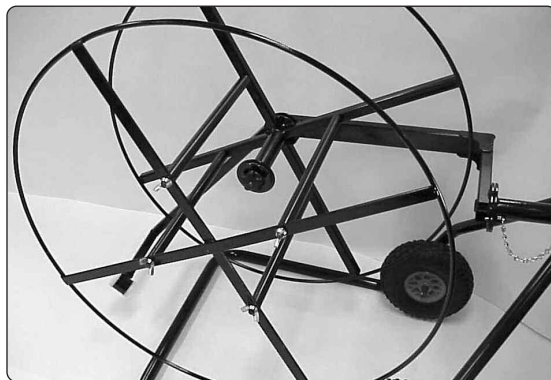

Step 10

To change the reel position, pull the quick-release pin at the spindle and rotate the reel. Insert the pin back through the appropriate alignment hole once the reel position is set.

