




**Single-stage SetPoint Controller  
with Floor Sensor (A3041501)**

**User Manual**




## User Interface

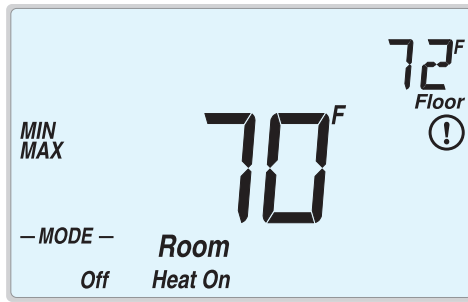

## Display Symbols

This thermostat will display symbols on its screen in order to indicate what mode it is in, what temperature it is operating at, or what equipment it is trying to turn on. This section describes each of those symbols.

<b>Heat On</b>	<b>HEAT ON</b> Heat is turned on.	<b>MIN</b>	<b>MIN</b> The floor is at or below the floor minimum temperature.
<b>—MODE—</b> <b>Off</b>	<b>MODE OFF</b> The heating system is off.	<b>MAX</b>	<b>MAX</b> The floor has reached the floor maximum temperature.
	<b>WARNING SYMBOL</b> Indicates an error is present.		

## Setting the Temperature

To change the heat temperature setting, push the  $\Delta$  or  $\nabla$  buttons to select a preferred temperature setting.

### Air Temperature Only

If there is only an air temperature sensor (no floor sensor), the thermostat operates to control your desired air temperature.

### Floor Temperature Only


If the air sensor has been disabled, the thermostat will only maintain floor temperature and ignore air temperature. This operation is recommended for areas such as bathrooms to ensure that tile floors are warm to the touch.

### Floor and Air Temperature

If the air sensor is turned on and a floor sensor is connected, the thermostat will maintain your desired air temperature as well as a minimum floor temperature.

This operation is recommended for areas with large windows that allow the sun to shine into a room and keep it warm without the need for heat. This can allow the floors to cool off during the afternoon. When the sun goes down, it can take a long time for the floors to get warm again. This may cause the room to cool off too much in the early evening. A floor minimum setting can help with this condition by maintaining a floor minimum temperature. Keep in mind the floor minimum temperature will override the air temperature, and if set too high, may overheat the room.

This operation is also recommended for rooms with hardwood floors. Setting floor minimum and maximum temperatures is a way of enhancing the comfort of your living space while protecting your floor coverings.

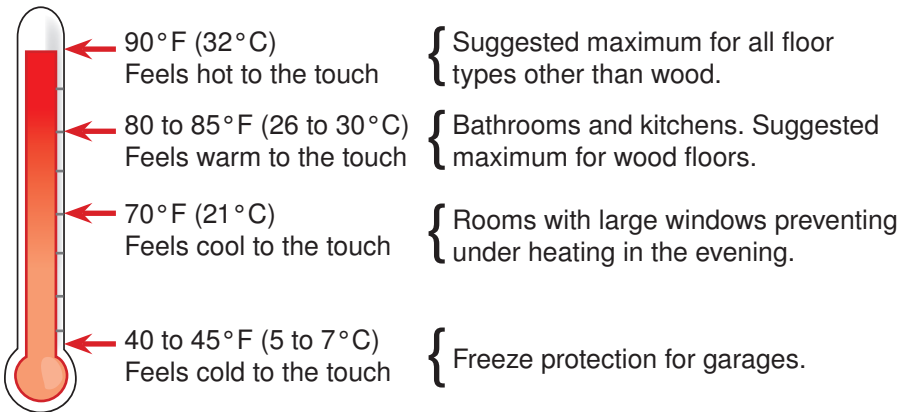

## Settings

- Press and hold down both the  $\Delta$  and  $\nabla$  buttons for 3 seconds to change from one step to the next.
- Release both buttons once the step has been reached.
- Press the  $\Delta$  or the  $\nabla$  button to change the setting, if available.
- Press and hold down both the  $\Delta$  and  $\nabla$  buttons for 3 seconds to go to the next step, OR
- After 15 seconds of no button activity, the display goes back to normal operation.

Display	Setting
<b>User settings.</b>	
MODE HEAT	<b>MODE</b> Select heat or off.
UNITS F	<b>UNITS</b> Select the temperature units in degrees Fahrenheit or Celsius.
LIGHT AUTO	<b>BACK LIGHT</b> Select when the display back light should operate. Options are Off, Auto, On. Auto operates the backlight for 30 seconds after a keystroke.
SET FLOOR 72°	<b>SET FLOOR</b> Set the floor minimum temperature. Available when an auxiliary floor sensor is connected and the built-in room temperature sensor is on.
TYPE 5 19	<b>TYPE</b> Device Type number.
ESCAPE	<b>ESCAPE</b> Release the $\Delta$ and $\nabla$ buttons to return to the home screen.